
## **Engine Stop Switch**

RIGHT HANDLEBAR

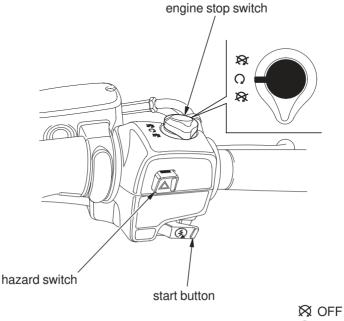

∞ OFF Ω RUN

The engine stop switch is used to stop the engine in an emergency. To operate, turn the switch to the OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.

If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will remain on, resulting in battery discharge.

 $\otimes$   $\cap$