

Controls & Features

Headlight Dimmer Switch



The headlight dimmer switch is used to change between the high and low headlight beams. To operate, push the button to HI for high beam, LO for low beam.

Turn Signal Switch



The turn signal switch is used to signal a turn or a lane change. To operate, move the switch all the way in the proper direction and release it. The appropriate turn signal lights will start blinking. To cancel the light, push the switch in.

(Models with auto turn signal cancel)

The lights will automatically stop when you complete the turn.

To signal a lane change, move the switch all the way to the left or right and release it. The turn signal lights will automatically stop in 7 seconds or after riding 110 yards (120 m).

Horn Button



The horn is used to alert other motorists. To operate, push the button.

Audio Control Switches

The audio control switches mounted on the left handlebar and above the fuel fill compartment are used to operate the radio. For specific features and operation instructions, see *Audio Systems*, [page 69](#).


LEFT HANDLEBAR

headlight dimmer switch



turn signal switch

horn button

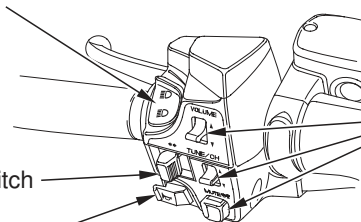

audio control switches