iPod®/USB Flash Drive

Playable music files

In the audio function, MP3/WMA music files in USB flash drives can be played.

Read the followings before recording files in your USB flash drives which may have restrictions.

• Do not edit other type of extension. Playing USB flash drives containing these kind of files can cause troubles such as the device or speakers failure.

MP3/WMA files in your USB flash drives can be played on the following specifications.

MP3

| Items | Contents |
|----------------------|--|
| Standards | MPEG1 Audio Layer 2,3 |
| | MPEG2 Audio Layer 2,3 |
| | MPEG2.5 Audio Layer 2,3 |
| Sampling periodicity | MPEG1 32/44.1/48 kHz |
| (kHz) | MPEG2 16/22.05/24 kHz |
| | MPEG2.5 8/11.025/12 kHz |
| Bit rates (kbit/s) | MPEG1 Audio Layer 2: 32-384/VBR/CBR |
| | MPEG1 Audio Layer 3: 32-320/VBR/CBR |
| | MPEG2 Audio Layer 2: 8-160/VBR/CBR |
| | MPEG2 Audio Layer 3: 8-160/VBR/CBR |
| | MPEG2.5 Audio Layer 3: 8-160/VBR/CBR |
| | |
| | If the files are low bit rate and/or small |
| | data size, you may not be played the files. |
| File systems | FAT12/16/32 |
| Channel modes | Stereo/Joint stereo/Dual channel/Monaural |
| Maximum hierarchies | 8 hierarchies (including the root directory) |
| Maximum folders | 999 folders |
| Maximum files | 65025 files (255 files in one folder) |
| Available tags | ID3v1(v1.0/v1.1), ID3v2(v2.2/v2.3/v2.4) |
| Available number of | max: 16 characters |
| characters | (According to the character code or the |
| | number of songs, the maximum number of |
| | characters may not be displayed.) |