

## iPod®/USB Flash Drive

---

You can also change or select playlists, artists and albums on the iPod® menu, use the TUNE/CH lever (see [page 103](#) ).

Use the TUNE/CH lever while an iPod® is playing to change files.

Push the TUNE/CH lever up to change to the next file.

Push the TUNE/CH lever down to change to the previous file.

