

Cover Removal

Front Lower Cover Removal

Refer to *Safety Precautions* on [page 118](#).

The front lower cover must be removed for engine oil maintenance.

Removal

1. Remove the clips.
2. Remove the bolt A and bolts B.

Installation

- Installation can be done in the reverse order of removal.

FRONT

