

Audio Systems

Treble:

To select the Treble control, push the MODE knob/button until “TREBLE” (“Treble”) is displayed ([page 97](#)). Then, within 5 seconds, change the treble control.

- To emphasize treble — turn the MODE knob/button clockwise.
- To reduce treble — turn the MODE knob/button counterclockwise.
(Treble level ranges from 6 down to -6.)

(Models not equipped with
Navigation System)



(Models equipped with
Navigation System)

