

# Spark Plugs

## Spark Plug Recommendation

standard spark plug	BKR6E-11 (NGK) or K20PR-U11 (DENSO)
for cold climate (below 5°C, 41°F)	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
for extended high speed riding	BKR7E-11 (NGK) or K22PR-U11 (DENSO)

Use only the recommended type of spark plugs in the recommended heat range.

### NOTICE

*Using spark plugs with an improper heat range can cause engine damage.*

## Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on [page 154](#).

1. Remove the left and right cylinder head side cover ([page 169](#)).
2. Clean any dirt from around the spark plug bases.
3. Disconnect the spark plug caps. Take care to avoid damaging the spark plug wire when disconnecting the caps.
4. Using a spark plug wrench provided in the tool kit (Canada model only), remove the spark plugs.

