

Index

| | |
|---|---------|
| side stand indicator..... | 15, 19 |
| spark knock | 172 |
| spark plugs | 190 |
| specifications..... | 254 |
| speedometer..... | 15, 16 |
| stand, side..... | 208 |
| start/reverse button | 37 |
| starting, | |
| engine..... | 72 |
| troubleshooting | 227 |
| steering lock | 87 |
| stop switch, engine..... | 36 |
| stopping engine | 73 |
| storage, | |
| motorcycle..... | 220 |
| owner's manual | 165 |
| suspension, | |
| rear spring pre-load..... | 193 |
| switch, | |
| audio control | 38, 101 |
| cruise control..... | 37, 92 |
| engine stop | 36 |
| hazard..... | 39 |
| headlight dimmer | 38 |
| ignition | 35 |
| rear suspension spring pre-load adjustment..... | 41, 193 |
| reverse | 37, 76 |
| turn signal..... | 38 |

| |
|----------|
| T |
|----------|

| | |
|---|--------|
| tachometer | 15, 16 |
| theft-prevention tips | 89 |
| tires, | |
| air pressure | 202 |
| flat | 230 |
| replacing..... | 206 |
| tire pressure monitoring system (TPMS) | 83 |
| tire pressure monitoring system (TPMS) explanation..... | 261 |
| tire pressure monitoring system (TPMS) indicator..... | 85 |