


Instruments *(Continued)*

Units

You can change the units used for fuel consumption, distance, temperature and air pressure.

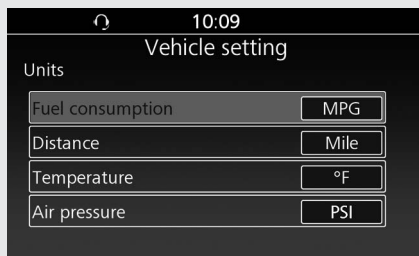

To Change the Unit for Fuel Consumption [Fuel consumption]

If you want to select "L/100 km" or "km/L" for fuel consumption, "km" must be selected in the [Distance] menu in advance. When "Mile" for distance is selected, only "MPG" can be selected.

- 1 Select [Units], and then press or **[ENT]** switch.
- 2 With [Fuel consumption] selected, press or **[ENT]** switch until the desired unit is displayed.

Selectable units: L/100 km, km/L or MPG

Default: MPG (USA model) / L/100 km (Canada model)

- 3 Return to the previous screen or the Home screen. P.24

The units for average fuel mileage [Fuel consumption (Avg.)] and current fuel mileage [Fuel consumption (Inst.)] are changed in the information bar.

To Change the Unit for Distance [Distance]

- 1 Select [Units], and then press or **[ENT]** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch to select [Distance].
- 3 With [Distance] selected, press or **[ENT]** switch to select the unit.
▶ In conjunction with the change of the unit for distance, the unit for fuel consumption switches to "L/100 km or km/L" or "MPG" automatically.

Selectable unit: km or Mile

Default: Mile (USA model) / km (Canada model)

- 4 Return to the previous screen or the Home screen. P.24

The units for the cruise control set speed (), odometer [TOTAL], tripmeter A/B [TRIP A/B] and available driving distance [RANGE] are changed in the INFO 1 display. In addition, the units for average fuel mileage [Fuel consumption (Avg.)] and current fuel mileage [Fuel consumption (Inst.)] are changed in the information bar.

To Change the Unit for Air Temperature Gauge [Temperature]

- 1 Select [Units], and then press or **[ENT]** switch.
- 2 Rotate or press \blacktriangle / \blacktriangledown on the 4-way key switch to select [Temperature].
- 3 With [Temperature] selected, press or **[ENT]** switch to select the unit.

Selectable unit: °F or °C

Default: °F (USA model) / °C (Canada model)

- 4 Return to the previous screen or the Home screen. P.24

The unit for air temperature gauge [AIR] is changed in the INFO 1 display.