


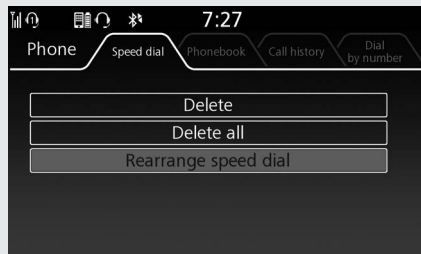






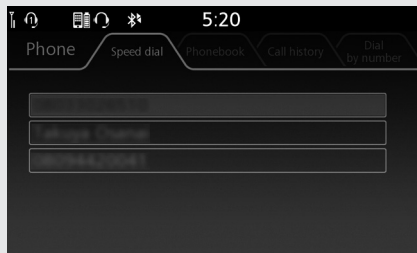
## To Rearrange the Order of the Speed Dial List

- 1 Select [Speed dial], and then press and hold  (Home) button/ (Home) switch.
- 2 Select [Rearrange speed dial], and then press  or **ENT** switch.




 


- 3 Select the phone number you want to arrange, and then press  or **ENT** switch.

- 4 Rotate  or press  /  on the 4-way key switch to change the order of the speed dial list.



- 5 Press  or **ENT** switch to set your selection.

## To Delete a Stored Speed Dial Number

- 1 Select [Speed dial].
- 2 Select the phone number you want to delete, and then press and hold  (Home) button/ (Home) switch.
- 3 Select [Delete] or [Delete all], and then press  or **ENT** switch.
- 4 A confirmation message appears on the screen. Select [YES], and then press  or **ENT** switch.

