Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available. Check with your Honda dealer's parts department.

Importance of Maintenance	P. 139
Maintenance Schedule	P. 140
Maintenance Fundamentals	P. 143
Removing & Installing Body Components.	P. 153
Battery	P. 153
Cylinder Head Side Cover	P. 154
Fog Light Cover	P. 155
Left Engine Side Cover	P. 155
Side Cover	P. 156
Spark Plug	P. 157
Engine Oil	P. 158
Coolant	P. 162

Final Drive Oil	. P.	163
Brakes	. P.	164
Side Stand	Р.	167
Clutch	Р.	168
Throttle	Р.	169
Crankcase Breather	Р.	170
Other Adjustments	Р.	171
Headlight Aim		
Clutch and Brake Levers		
Electrical Adjustable Suspension		
GL1800/D/DA	Ρ.	172
Rear Suspension GL1800B/BD		

Other Replacement	Ρ.	174
Honda SMART Key Battery	Ρ.	174