

Parts Location

Rear brake fluid reservoir (P58)

Fuse box (P87)

Battery (P53)

Front brake fluid reservoir
(P58)

Throttle grip (P68)

Engine oil fill cap/dipstick
(P54)

Air cleaner (P57)

Spark plug (P70)

Engine oil drain bolt (P55)

