

# Engine Will Not Start


## Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ [P. 28](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

## Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is in  (Run) position ➤ [P. 26](#)
- Check for a blown fuse ➤ [P. 87](#)
- Check for a loose battery connection or battery terminal corrosion ➤ [P. 43](#)
- Check the condition of the battery ➤ [P. 83](#)

If the problem continues, have your motorcycle inspected by your dealer.