


# Air Cleaner

## Cleaning

1. Lift the cargo bed (page 46).
2. Unlatch the retainer clips.
3. Remove the air cleaner housing cover.

### UNDER CARGO BED

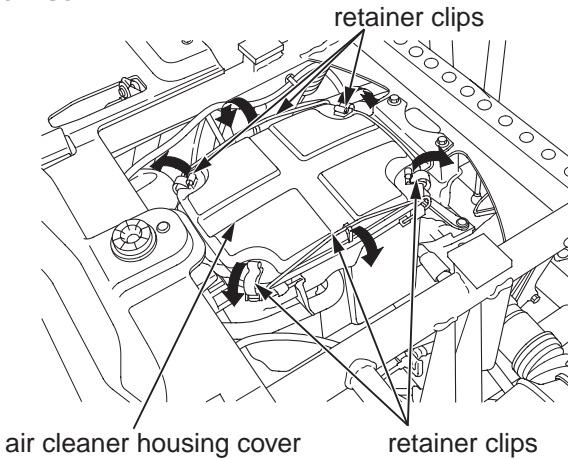

(cont'd)