

## Switches *(Continued)*

NC700XD

### Parking brake lever and Release button

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

#### To apply the parking brake lock


Pull the parking brake lever back to lock the rear wheel.

- ▶ Be sure the release button pops out and parking brake lever is not released.
- ▶ The parking brake lock will not function if the parking brake is not adjusted properly. ( P92)

#### To release the parking brake lock

Release the parking brake lever by lightly pulling in the lever (a ) and pressing the release button (b ).

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

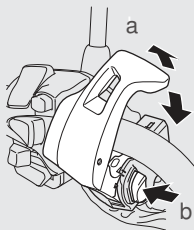




 **Hazard switch** ( P34)

### Shift up switch (+)

To shift up the gear. ( P47)

### Headlight dimmer switch

-  : High beam
-  : Low beam

 **Turn signal switch**

- ▶ Pressing the switch turns the turn signal off.

### Shift down switch (-)

To shift down the gear.  
( P47)