



The lower fairing must be removed to service the coolant reserve tank and spark plugs, to replace the engine oil filter and clutch oil filter.

### Removal

1. Remove the screw A and B.
2. Remove the lower fairing, then remove the prongs from the grommets.

### Installation

Install the parts in the reverse order of removal.