


Adjusting the Windscreen Height

You can adjust the windscreen height in 2 positions.

1. Remove the windscreen by removing the screws and the washers.

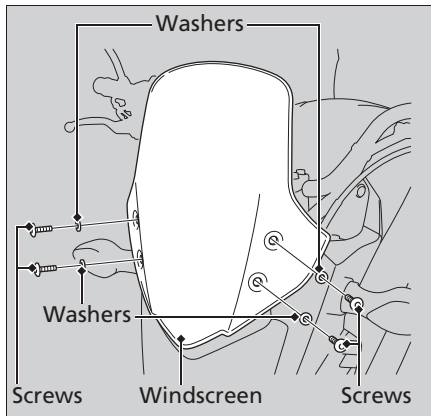

2. Remove the nuts and the adaptors.

