

## If the “-” Indicator is Blinking in the Gear Position Window While Riding

### NC700XD only

If the “-” indicator is blinking while riding, you may have a serious problem with the Dual Clutch Transmission system.

Park your motorcycle in a safe place and have your motorcycle inspected by a dealer immediately.

There is a possibility for you to ride yourself to go to dealer if you try to follow the procedure below.

1. Turn the ignition switch to OFF.
2. Turn the ignition switch to ON and start the engine.

### If you cannot start the engine:

Turn the ignition switch to OFF and move the motorcycle back and forth slightly (to disengage the gears).

Turn the ignition switch to ON again and start the engine.

### If you still cannot start the engine:

Start the engine while applying the brake lever or pressing the brake pedal.

### If you can shift from N to D mode:

When a gear position is shown in the gear position indicator, you can ride in that gear. Take your motorcycle to your dealer riding at a safe speed.

### If you can't shift from N to D mode and the “-” indicator is blinking:

Damage is preventing you from riding. Have your motorcycle inspected by your dealer immediately.