

### Starter Motor Operates But Engine Does Not Start

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 58
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 58
- Make sure engine stop switch is in the (Run) position. ➔ P. 51
- Check for a blown fuse. ➔ P. 146
- Check for a loose battery connection (➔ P. 95) or battery terminal corrosion (➔ P. 83).
- Check the condition of the battery. ➔ P. 143

If the problem continues, have your motorcycle inspected by your dealer.