

Instruments (Continued)

NC750XA/XD

Tachometer ➔ P.30

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Tachometer red zone
(excessive engine rpm range)

S indicator NC750XD

Comes on when the S mode is selected in the AT MODE. ➔ P.66

Torque Control level ➔ P.56

Clock

To set the clock: ➔ P.36

Total/Fuel mileage display ➔ P.25

Speedometer

D indicator

NC750XD

Comes on when the D mode is selected in the AT MODE. ➔ P.66

Gear position indicator ➔ P.35

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 0.85 US gal (3.2 L)
The reserve tripmeter display and reserve fuel consumption display show at the same time.

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.136

