Instruments (Continued)

3 Backlight brightness H (high) adjustment:

You can adjust the brightness to one of five levels.

1 Press the SEL button. The brightness is switched.



2 Press the SET button. The brightness H (high) is set, and the display moves to the backlight brightness L (low) adjustment.

4 Backlight brightness L (low) adjustment:

You can adjust the brightness to one of five levels.

The backlight brightness L (low) can be adjusted in the same manner as H (high).

► L (low) can not adjust brighter than H (high). Press the SET button. The brightness adjustment L (low) is set, and the display moves to the today date setting.