
## **Instruments** (Continued)

## **SP Setting Mode**

- 1 Selecting the user setting mode color:
- Select the SP setting mode. → P.36
- 2 Press the SEL button. The color is switched.
  - ► When the ECO mode is set to on, AQUA and GREEN can not be selected.
  - ► When the shift up mode is set to on, AMBER can not be selected.

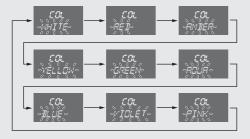

## 3 NC750X

Press the SET button. The user setting mode color is set, and the display moves to the opening/ending display setting.

## NC750XA/XD

Press the SET button. The user setting mode color is set, and the display moves to the inputting the opening message.