

Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

⇒ **Right turn signal indicator**

⇐ **Left turn signal indicator**

(ABS) ABS (Anti-lock Brake System) indicator

NC750XA/XD

Comes on when the ignition switch is turned to the ON position.

Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ **P.133**

High beam indicator

Low oil pressure indicator

Comes on when the ignition switch is turned to the ON position.

Goes off when the engine starts.

If it comes on while engine is running:

➔ **P.132**

Neutral indicator

Comes on when the transmission is in Neutral.

High coolant temperature indicator

Comes on when the ignition switch is turned to the ON position.

If it comes on while riding: ➔ **P.131**

