
Lower Cowl

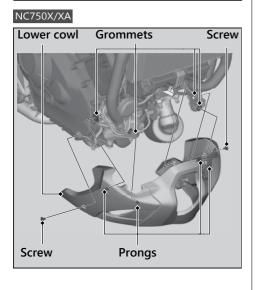

I Removal

- 1. Remove the screws.
- **2.** Remove the lower cowl by releasing its prongs from the grommets.

I Installation

Install the parts in the reverse order of removal.