
Clip Removal

Removal

1. Pull up the center pin to release the lock.

2. Pull out the clip of the hole.

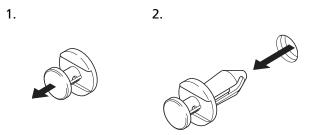

Installation

- 1. Insert the clip into the hole.
- 2. Press down the center pin securely to lock the clip.

1.

2.



