Storing Your Honda

6. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 168) once a month.

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

- 7. Wash and dry your ATV. Wax all painted surfaces.
- 8. Inflate the tires to their recommended pressures (page 152).
- 9. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
- 10. Place your ATV on blocks to lift all tires off the floor.
- 11. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.