


# If a Fuse Blows

## Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF ( O ) before checking or replacing the fuses.
2. Remove the seat ( page 100 ).
3. Remove the rear fender cover ( page 120 ).
4. To access the main fuse ( 2 ) and shift motor fuse ( 3 ), remove the fuse box cover ( 4 ).

## UNDER REAR FENDER COVER

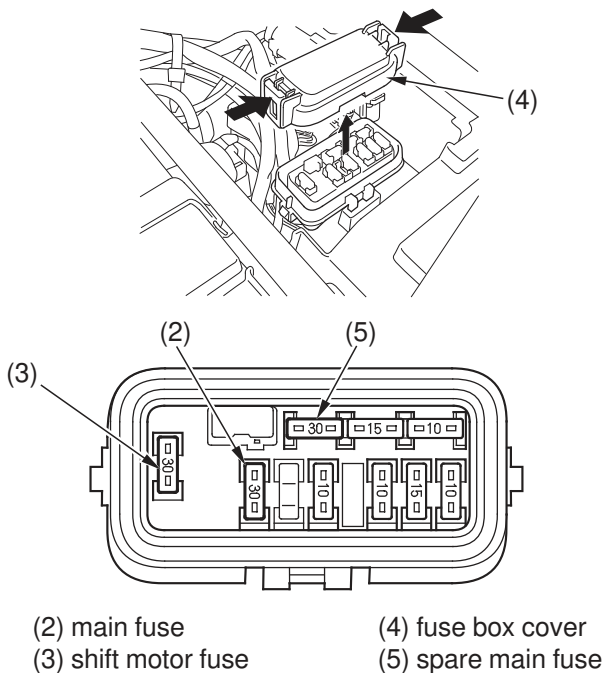

5. Pull the main fuse out.  
If it is blown, install the spare main fuse ( 5 ).

(cont'd)