


# If a Fuse Blows

---

## Circuit Fuse Access

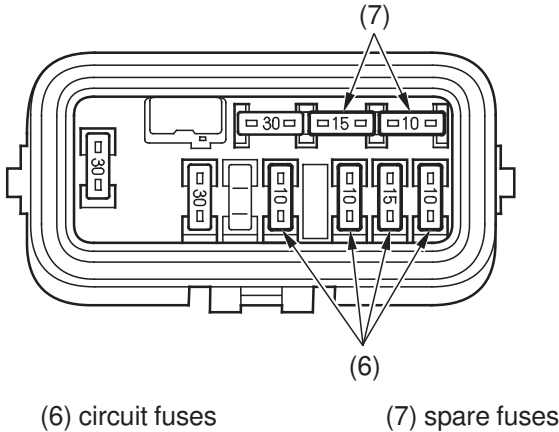

6. To check or replace a circuit fuse (6), pull the old fuse out of its retaining clips.  
If the fuse is blown, replace it with a spare fuse (7) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

### NOTICE

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

7. Install the fuse box cover.
8. Install the rear fender cover.
9. Install the seat.