

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
*	FUEL LINE				I	—	
*	THROTTLE OPERATION				I	147	
	AIR CLEANER	NOTE 1		C	C	141	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2		I	I	146	
	SPARK PLUG			I	I	151	
*	VALVE CLEARANCE			I	I	I	154
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R		120	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		125	
*	ENGINE IDLE SPEED			I	I	I	—
	RADIATOR COOLANT	NOTE 3			I	I	134
*	COOLING SYSTEM	NOTE 2			I	I	—

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 238).