## **Starting & Stopping the Engine**

## **Stalled Engine**

You can restart the engine while the vehicle is stopped by squeezing the front brake lever and pressing the start button.

Do not press the throttle lever while starting in gear. The engine will not start with the throttle fully open and in gear.

Once you have started the engine, release the front brake lever, then apply throttle gradually.