If Your Engine Quits or Won't Start

•	
SYMPTOM: Starter motor doesn't operate.	
WHAT TO DO	
Turn the ignition switch ON.	
Slide the engine stop switch to	
RUN.	
Shift into neutral.	
Replace with a new fuse of the	
same rating (page 213).	
Tighten the battery lead.	
Charge the battery (page 185).	
If charging doesn't help, see	
your dealer.	
If all possible causes are	
negative, the starter motor	
may be faulty. See your dealer.	

SYMPTOM: Starter motor works, but the engine won't start.	
POSSIBLE CAUSE	WHAT TO DO
out of fuel	Fill the fuel tank.
flooded engine	See Flooded Engine (page 73).
loose or unconnected	Install the spark plug cap
spark plug cap	securely. If the engine still
	won't start, see your dealer.
loose battery cables	Tighten the battery terminal
	bolts.
weak battery	Charge the battery (page 185).
	If charging doesn't help, see
	your dealer.