

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL	Refer to page	
			mi	100	600			1200
			km	150	1000			2000
			MONTH	1	6			12
	NOTE	HOURS	20	100	200			
*	FUEL LINE				I		—	
*	THROTTLE OPERATION				I		110	
	AIR CLEANER	NOTE 1			C	C	106	
	SPARK PLUG				I		117	
*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM			I	I	I	120	
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			88	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			92	
*	TRANSMISSION OIL				R	R	95	
*	ENGINE IDLE SPEED			I	I	I	116	
	RADIATOR COOLANT	NOTE 3			I	I	104	
*	COOLING SYSTEM	NOTE 2			I	I	100	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 210](#)).