

Transmission Oil

Add Transmission Oil:

5. Reinstall the oil drain bolt with the new sealing washer and tighten it to the specified torque:
16 lbf·ft (22 N·m , 2.2 kgf·m)
6. Fill the crankcase with the recommended grade oil approximately:
0.72 US qt (0.68 ℓ)
7. Reinstall the transmission oil fill cap.
8. Start the engine and let it idle for 3 – 5 minutes. Stop the engine, wait 2 – 3 minutes to allow the oil to properly distribute itself in the clutch and transmission. Check the transmission oil level by following the steps in *Checking & Adding Transmission Oil* (see [page 97](#)).
9. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly.