

# Storing Your Honda

---

11. Inflate the tires to their recommended pressures ([page 140](#)).
12. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
13. Place your ATV on blocks to lift all tires off the floor.
14. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

## Removal from Storage

Refer to *Safety Precautions* on [page 73](#).

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months — change the engine oil ([page 92](#)) and transmission oil ([page 98](#)). Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
3. If your ATV has been stored for more than two months — ask your dealer to drain and replace the fuel.
4. Lubricate the drive chain ([page 152](#)).
5. Charge the battery ([page 158](#)) as required. Install the battery.
6. Perform a pre-ride inspection ([page 31](#)), then test-ride your ATV at low speeds.