


# Controls & Features

---

## Engine Stop Switch

e r

### LEFT HANDLEBAR

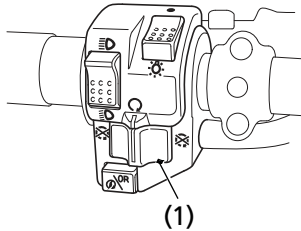

- (1) engine stop switch    r OFF  
   e RUN

The engine stop switch (1) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (r ) position. The switch must be in the RUN (e ) position to start the engine, and it should normally remain in the RUN (e ) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON (q ) and the engine stop switch OFF (r ), the battery will discharge. Turn the ignition switch to OFF (w) to prevent battery discharge.