


Engine Oil & Filter

2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1) and sealing washer (2).

UNDER ENGINE

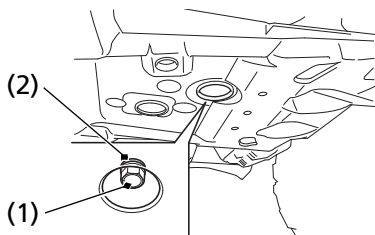

(1) engine oil drain bolt

(2) sealing washer

(cont'd)