


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” [► P. 41](#)

### Fuse Box Fuses

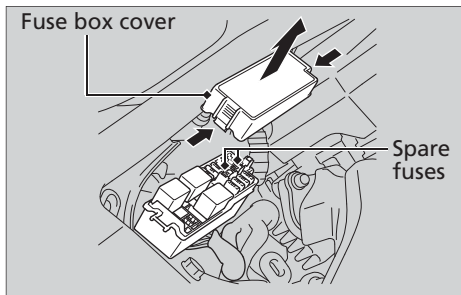

1. Remove the right side cover. [► P. 50](#)
2. Remove the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the right side cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.