## **Periodic Checks**

You should also perform other periodic maintenance checks at least once a month regardless of how often you ride, or more often if you ride frequently.

Also, check the odometer reading against the Maintenance Schedule and perform all maintenance that is due. P. 34

| Tires and wheels   | Check the air pressure (▶ P. 45), examine tread for wear and damage (▶ P. 45), and check the wheels for damage.  |
|--------------------|--|
| Fluid levels       | Check the engine oil level (⊇ P. 58), engine coolant level (⊇ P. 63), brake fluid level (⊇ P. 67), and final drive oil level (⊇ P. 65).  |
| Lights             | Check that the headlight, brake light, taillight, turn signals and license plate light are working properly.   |
| Controls           | Check the freeplay of the clutch lever (→ P. 71), and throttle grip (→ P. 74).   |
| Fuses              | Check that you have a full supply of spare fuses.  |
| Nuts & bolts       | Check the major nuts and bolts, and tighten as needed.   |
| Crankcase breather | Service the crankcase breather more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube (5) P. 75). |