


# Removing & Installing Body Components

## Seat

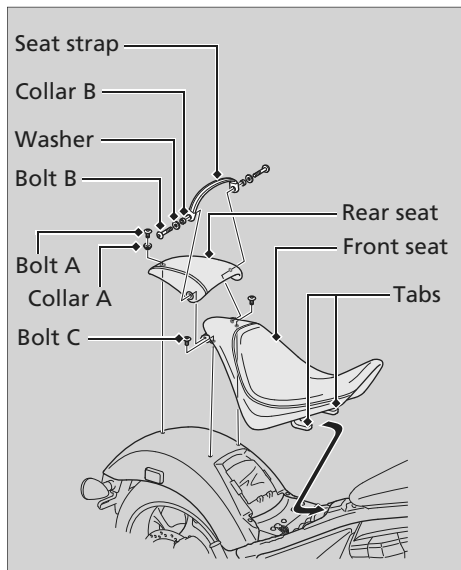

## Removal

1. Remove the seat mounting bolt A and collar A.
2. Remove the seat strap by removing the seat mounting bolts B, washers and collars B.
3. Remove the rear seat.
4. Remove the seat mounting bolts C.
5. Pull the front seat back and up.