

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the bolts, washers and air cleaner housing cover.
2. Remove the air cleaner element.
3. Thoroughly clean the inside of the air cleaner housing.
4. Install the new air cleaner element.
 - ▶ Make sure the air cleaner element is installed securely.
5. Reinstall the air cleaner housing cover, washers and bolts.
6. Tighten the bolts.

Torque: 1.1 lbf·ft (1.5 N·m, 0.2 kgf·m).

