


Changing Final Drive Oil

1. Place your motorcycle on the side stand on a level surface.
2. Place a drain pan under the drain bolt.
3. Remove the oil fill hole cap, O-ring, drain bolt, and sealing washer to drain the oil.
► Discard the oil at an approved recycling center.

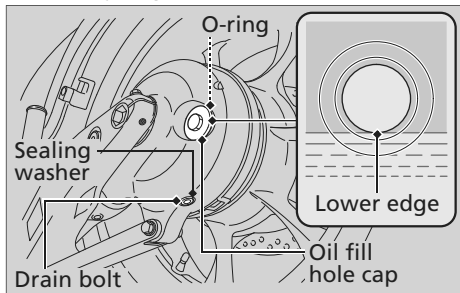

4. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 9 lbf·ft (12 N·m, 1.2 kgf·m).

5. Fill the final gear with the recommended oil. ► P. 44

Required oil: 4.4 US oz (130 cm³)

6. Check the oil level. It should be flush with the lower edge of the oil fill hole.
7. Install a new O-ring onto the fill hole cap. Tighten the fill hole cap.

Torque: 9 lbf·ft (12 N·m, 1.2 kgf·m).

8. Check that there are no oil leaks.