

### Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. To move the headlight case, loosen the bolts and nuts.

After adjustment, hand tighten the bolts and nuts first, then tighten.

**Torque:** 7 lbf·ft (10 N·m, 1.0 kgf·m).

Obey local laws and regulations.

