


Battery

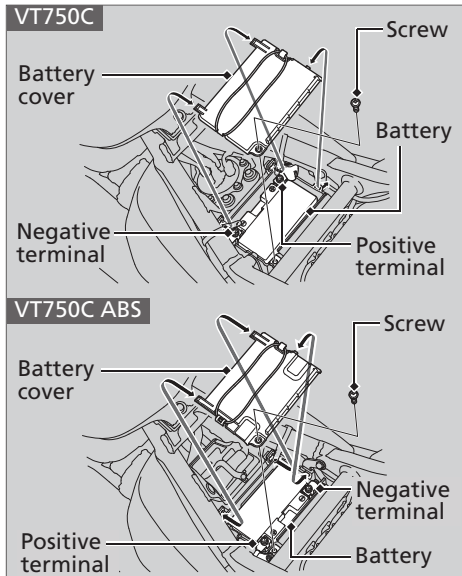

Removal

Make sure the ignition switch is off.

1. Remove the seat. [► P. 48](#)
2. Remove the battery cover by removing the screw.
3. Disconnect the negative \ominus terminal and remove the battery lead.
4. Disconnect the positive \oplus terminal and remove the battery lead.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal. Always connect the positive \oplus terminal first. Make sure that bolts and nuts are tight.

The clock will be reset 0:00 if the battery is disconnected.

For proper handling of the battery, see "Maintenance Fundamentals." [► P. 39](#)
 Battery Goes Dead [► P. 91](#)