

## Changing Spark Plug

For the recommended spark plug, see "Specifications". [▶ P. 112](#)

Use only the recommended type of spark plug in the recommended heat range.

### NOTICE

Using spark plug with an improper heat range can cause engine damage.

1. Park your scooter on the side stand on a level surface.
2. Pull the floor mat off.
3. Remove the screw.
4. Remove the plug maintenance lid by inserting a flat head screwdriver covered with a protective cloth into the slit on the floor.

