

## Instruments *(Continued)*

### Changing of speed and mileage unit

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold **SEL** button and **SET** button.
- 3 Press **SEL** button to select either "km/h" and "km" or "mph" and "mile".



- 4 Press **SET** button.  
The speed and mileage unit is set, and then the display returns to the ordinary display.
  - ▶ The speed and mileage unit can also be set by turning the ignition switch to the OFF position.