


Left Side Cover

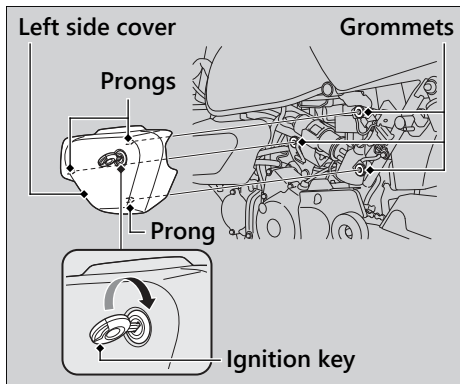

Removal

1. Insert the ignition key into the lock.
2. Carefully pull the left side cover out from the grommets while turning the ignition key clockwise.

Installation

1. Align the prongs with the grommets.
2. Push the left side cover into position while turning the ignition key clockwise.
 - Make sure that the left side cover is locked securely in position by pulling it lightly.
3. Remove the ignition key.