


5. Remove the air cleaner element by removing the screw.

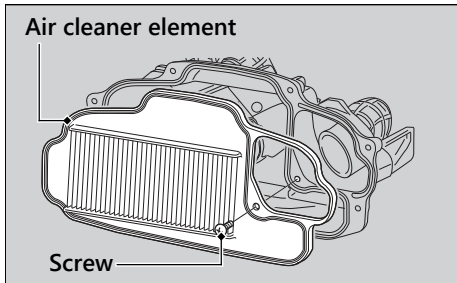

6. Install the new air cleaner element.
  - Make sure the air cleaner element is installed securely.

**Torque:** 0.8 lbf·ft (1.1 N·m, 0.1 kgf·m)

7. Install the parts in the reverse order of removal.
  - Make sure the air cleaner case cover is installed securely.

**Torque:** 0.8 lbf·ft (1.1 N·m, 0.1 kgf·m)