

## ■ Rear Wheel

### Removal

1. Support your vehicle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. Loosen the rear axle nut and turn the adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
3. Remove the rear axle nut.

