

# INSTRUCTION FOR USE OF PARTS LIST

This Parts list comprises spare parts for Honda All Terrain Cycle Model ATC90, its affiliated products. Prices are not listed, therefore reference to the "HONDA PARTS PRICE LIST" issued by the HONDA Parts Division is necessary for checking price.

These permanent bound parts list are recommended for use by general dealers and service personnel, and can be purchased by anyone who has need for their use.

## DESCRIPTION OF PARTS LIST


### 1. Grouping by Blocks

The parts list is divided into the "ENGINE GROUP" and "FRAME GROUP". These groups are further broken down into functional blocks as indicated in the "CONTENTS" of this list.

### 2. Make-Up of the Part Number

The following example is the definition of parts number.

(Example)

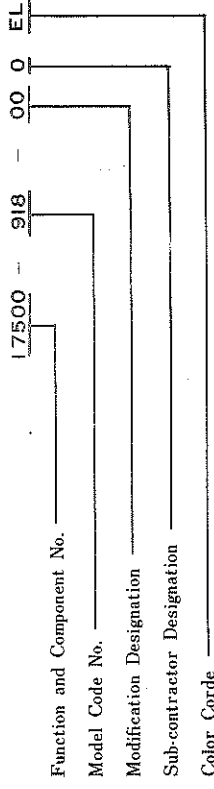

### 3. Abbreviations

The abbreviations used in this parts list are as follows:

- Assy. .... Assembly
- hex. .... hexagonal
- 22T ..... 22 teeth

Block No.	Nomenclature	Page
F-7	Air Cleaner .....	48
F-8	Step · Brake Pedal .....	50
F-9	Chain · Chain Case · Chain Tensioner .....	52
F-10	Brake · Rear Hub · Driven Sprocket .....	54
F-11	Frame · Muffler · Ignition Coil .....	56

## TOOL

T-1	Tool .....	60
-----	------------	----

## OPTIONAL PARTS

O-1	Head Light · Tail Light .....	62
O-2	Step Guard · Tire Gauge · Air Pump · Carrier .....	64

## INDEX

Part No. Index .....	67
Alphabetical Index .....	73

I.A.