



OIL PUMP

REMOVAL

NOTE


The oil pump can be removed with the engine mounted in the frame.

Remove the oil drain plug and drain the oil from the engine (page 2-2). Remove the right crankcase cover (page 2-2).

Remove the clutch assembly (page 8-2).



Remove the three oil pump screws and oil pump.

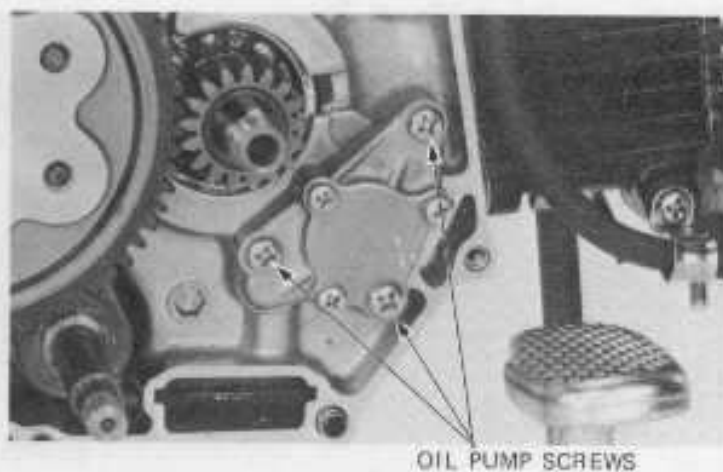

INSPECTION

Remove the oil pump body cover.



PUMP BODY COVER